




FixDrip PF
for Simplex atomizer

09-A6CK-4D-E

18-10-17

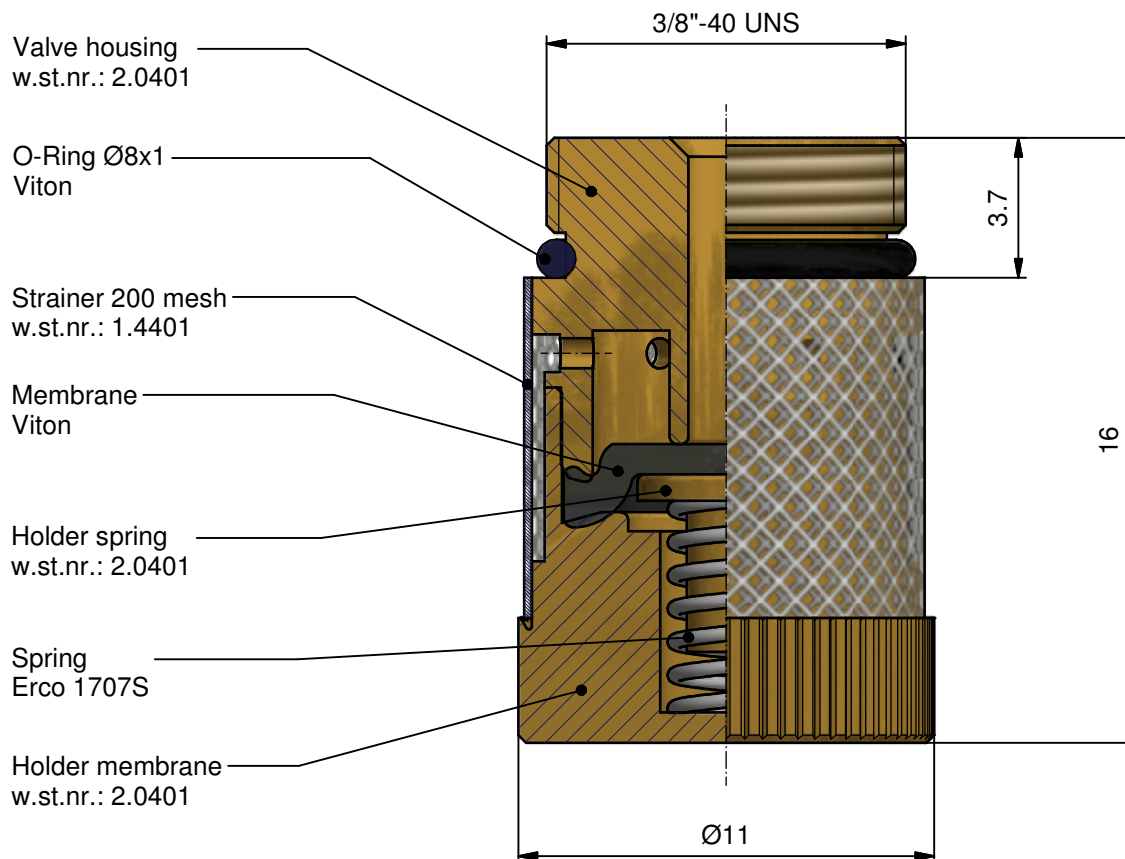

Specification:

Opening pressure: 5.2 Bar
Closing pressure: 3.6 Bar

Pressure drop:

0 bar up to 5.0 USgal/h
0.07 bar up to 8.0 USgal/h
0.35 bar up to 15.0 USgal/h

Temperature range -15 °C bis + 200 °C

Test oil according to:

ISO 4113
SAE J 967D

Test conditions:

3,5 cSt. at 37.8 °C
817 kg/m³ at 37.8 °C

Mounting the FixDrip:

If the atomizer was supplied with a mounted filter, the filter must first be dismantled.
The FixDrip valve should be assembled by hand only finger tight, without damaging the O-ring.
To ensure proper operation and sealing, the FixDrip valve should be mounted under the highest purity.
When handling the atomizer it is essential to ensure that the atomizer bore is neither damaged nor contaminated.
Therefore, any contact with the bore should be avoided.

